

# STOP!!!!!!

**Handhelds will need this in order to start using them.**

**When handheld loses power the following will bring back all stored settings.**

- 1. When handheld first boots a messagebox will prompt you to warm boot.**
- 2. Hold Restart button on back of handheld for 6 seconds.**



- 3. You will see a screen with green letters**

**Reset the system Please wait...**

- 4. After the handheld reboot then your handheld settings will be restored**
- 5. Backup handheld to save all wireless and desktop icon (Next Page)**