

Eagle Air Compressor part breakdown sheet - Two Stage Stationary Units (Horizontal)

Item	Description	5*80H2	7*80H2	10*120H2	15*120H2
1	Compressor w/ Flywheel	HPV05A	HPV05A	HPT10A	HPT15
2	Discharge Tube	TU-3/4-CU (2.5ft)	TU-3/4-CU (2.5ft)	TU-15-1	TU-15-1
	Flare Fitting/Elbow	49-12E & 40-12	49-12E & 40-12	F041S-16SP & 48-16H	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R	PG200-2.5R	PG200-2.5R	PG200-2.5R
4	Outlet Valve	BV3/4MF	BV3/4MF	VA1	VA1
5	Air Receiver	80HE20X63-B	80HE20X63-B	120HE24X68-B	120HE24X68-B
6	Drain Cock	DC1/4	DC1/4	DC1/4	DC1/4
7	V-Belt	A73 (2)	A73 (2)	B89 (2)	B76 (2)
8	Belt Guard	BG80GAL	BG80GAL	BG10	BG15
9	Motor - 1 Phase, 208/230Volt	EM05.0-18-10	EM07.5-18-10	N/A	N/A
	- 3 Phase, 208/230-460V	EM05.0-18-30	EM07.5-18-30	EM10.0-18-30	EM15.0-18-30
	- 3 Phase, 575Volt	EM05.0-18-50	EM07.5-18-50	EM10.0-18-50	EM15.0-18-50
10	Check Valve	P7575ST	P7575ST	P1010S-T	P1010S-T
11	Pressure Switch	21UCBDB-170	21UCBDB-170	21UCBDB-170	21UCBDB-170
12	Pulley - Motor	2MAL92	2MAL92	2B9.4PD	4B6.4PD
13	Hub or Bushing	LX11/8	LX11/8	SK13/8	SD15/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A	TU-1/4-CU & 68-4A	TU-1/4-CU & 68-4A	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200	PSV1/4-200	PSV1/4-200	PSV1/4-200
	Eagle Compressor Oil	EAOIL10	EAOIL10	EAOIL10	EAOIL10

MODELS

5180H2	7180H2
5180H2-CS	7180H2-MS
5380H2	7380H2
5380H2-CS2	7380H2-CS2
5380H2-CS4	7380H2CS4
5580H2	75820H2
5580H2-CS	7580H2-CS
103120H2	153120H2
103120H2-MS208	153120H2-MS208
103120H2-MS230	153120H2-MS230
103120H2-CS460	153120H2-CS460
105120H2	155120H2
105120H2-CS	155120H2-CS

* For 5380H2-CS2 - sub part #11 for CS-10/16A

* For 7380H2-CS2 - sub part #11 for CS-20/24A

* For 103120H2-MS208 (208Volt) - add Magnetic Starter part #FFDC420

* For 103120H2-CS460 (460Volt) - sub part #11 for CS-10/16A

* For 153120H2-MS208 (208Volt) - add Magnetic Starter part #S99092

* For 153120H2-CS460 (460Volt) - sub part #11 for CS-20/24A

* For 5380H2-CS4 - sub part #11 for CS-6.3/10A

* For 7380H2-CS4 - sub part #11 for CS-10/16A

* For 103120H2-MS230 (230Volt) - add Magnetic S

* For 105120H2-CS (575Volt) - sub part #11 for CS-6.3/10A

* For 153120H2-MS230 (230Volt) - add Magnetic Starter part #FFGC420

 
 
* For 155120H2-CS (575Volt) - sub part #11 for CS-10/16A

* For 5180H2-CS - sub part #11 for CS24/30A

* For 7180H2-MS - add Mag Starter part # MS60981104

* For 5580H2-CS - sub part #11 for CS-6.3/10A



* For 7580H2-CS - sub part #11 for CS-6.3/10A

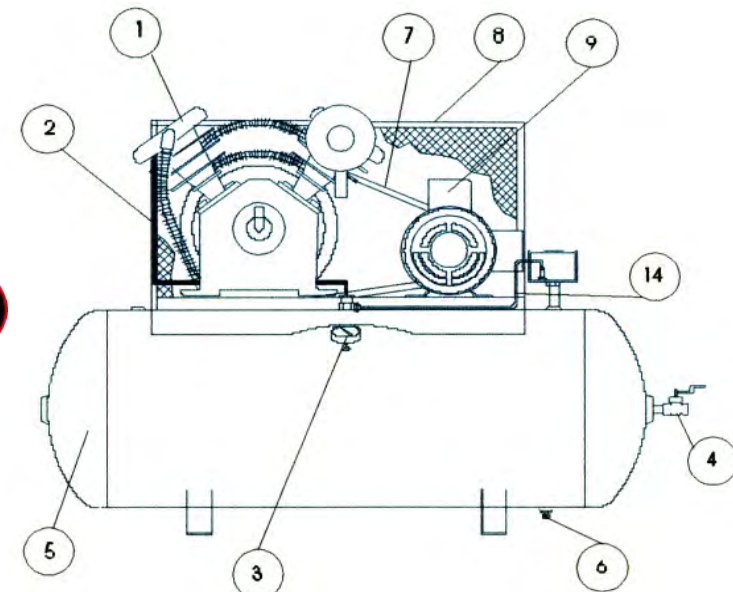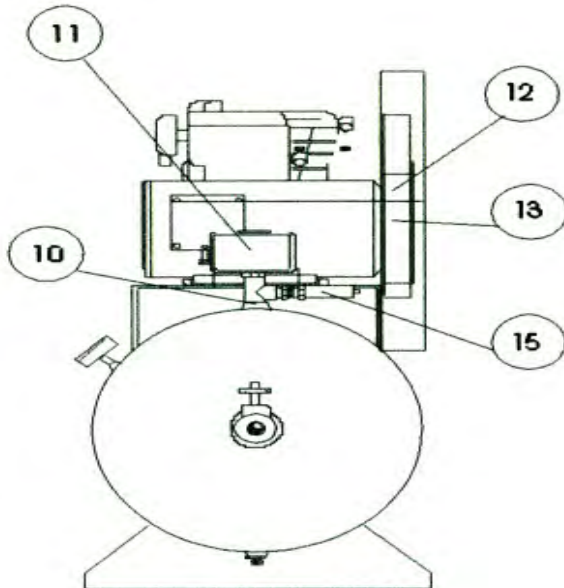

Call 1-800-551-2406 for the Customer Service Department.

Eagle Air Compressor part breakdown sheet - 155120H2-CS575

Item	Description	155120H2-CS575
1	Compressor w/ Flywheel	HPT15
2	Discharge Tube	TU-16-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	240-B
7	V-Belt	B76 (2)
8	Belt Guard	BG15
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM15.0-18-30
	- 3 Phase, 575Volt	EM15.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	CS-10/16A
12	Pulley - Motor	4B6.4PD
13	Hub or Bushing	SD15/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

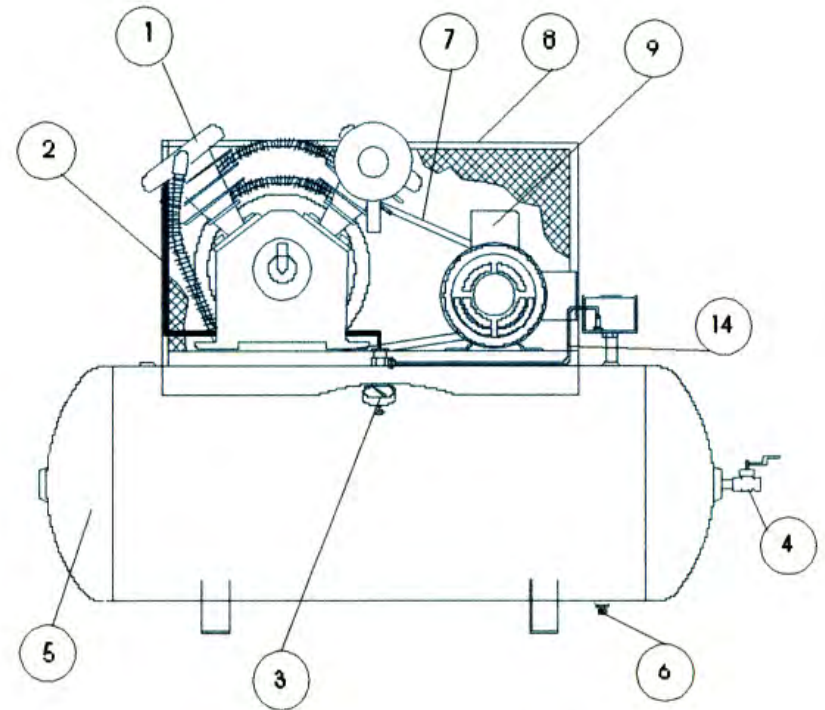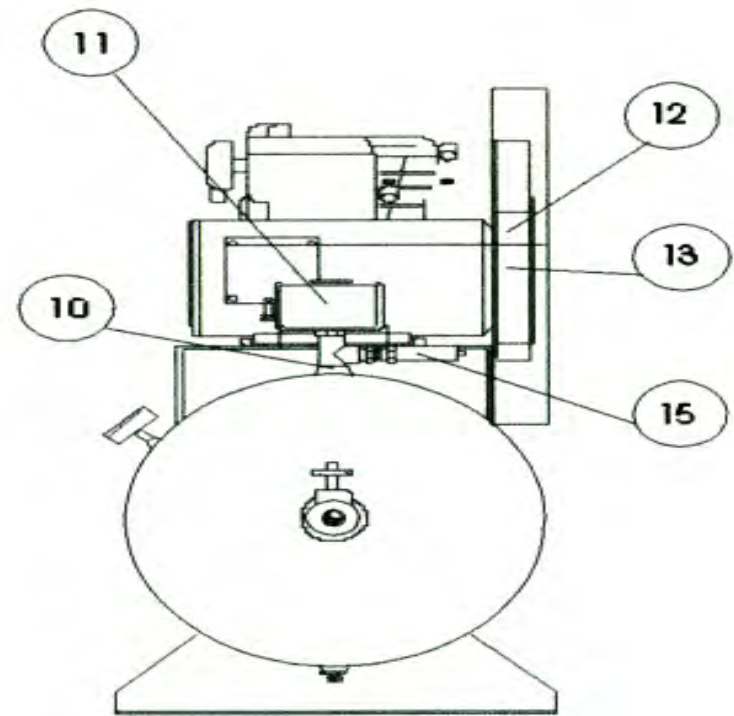  



155120H2-CS575



Call 1-800-551-2406 for Customer Service Department.

Eagle Air Compressor part breakdown sheet - 105120H2-CS575

Item	Description	105120H2-CS575
1	Compressor w/ Flywheel	HPT10A
2	Discharge Tube	TU-11.5-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	240-B
7	V-Belt	B89 (2)
8	Belt Guard	BG10
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM10.0-18-30
	- 3 Phase, 575Volt	EM10.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	CS-6.3/10A
12	Pulley - Motor	2B9.4PD
13	Hub or Bushing	SK13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

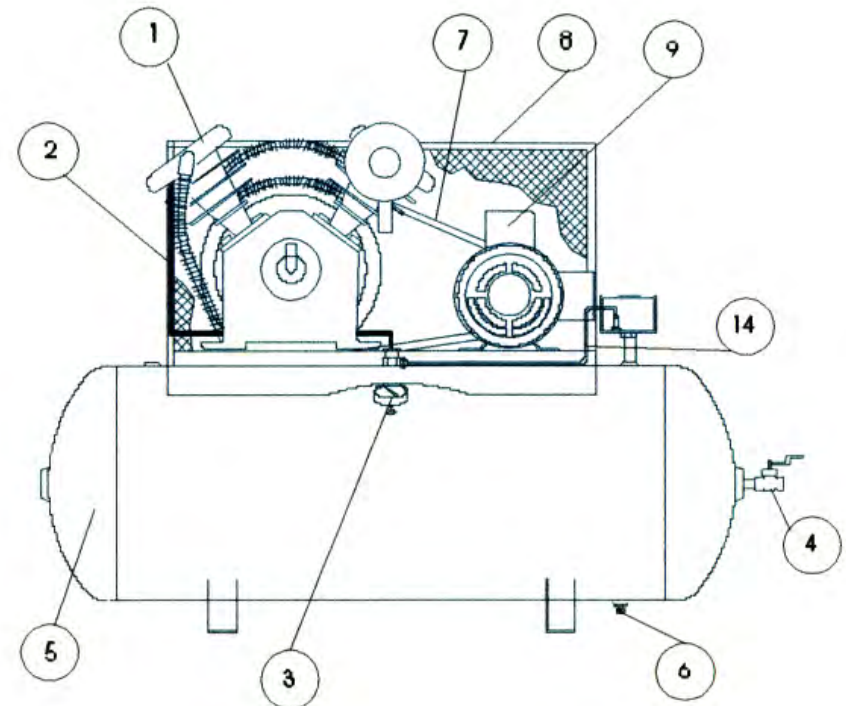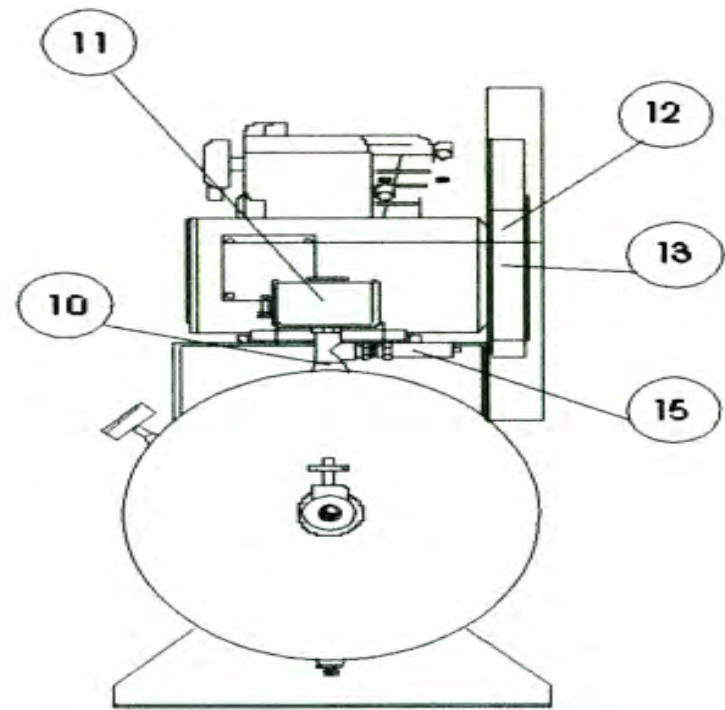  



105120H2-CS575



Call 1-800-551-2406 for the Customer Service Department.

Eagle Air Compressor part breakdown sheet - 103120H2-CS460

Item	Description	103120H2-CS460
1	Compressor w/ Flywheel	HPT10A
2	Discharge Tube	TU-11.5-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	DC1/4
7	V-Belt	B89 (2)
8	Belt Guard	BG10
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM10.0-18-30
	- 3 Phase, 575Volt	EM10.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	CS-10/16A
12	Pulley - Motor	2B9.4PD
13	Hub or Bushing	SK13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

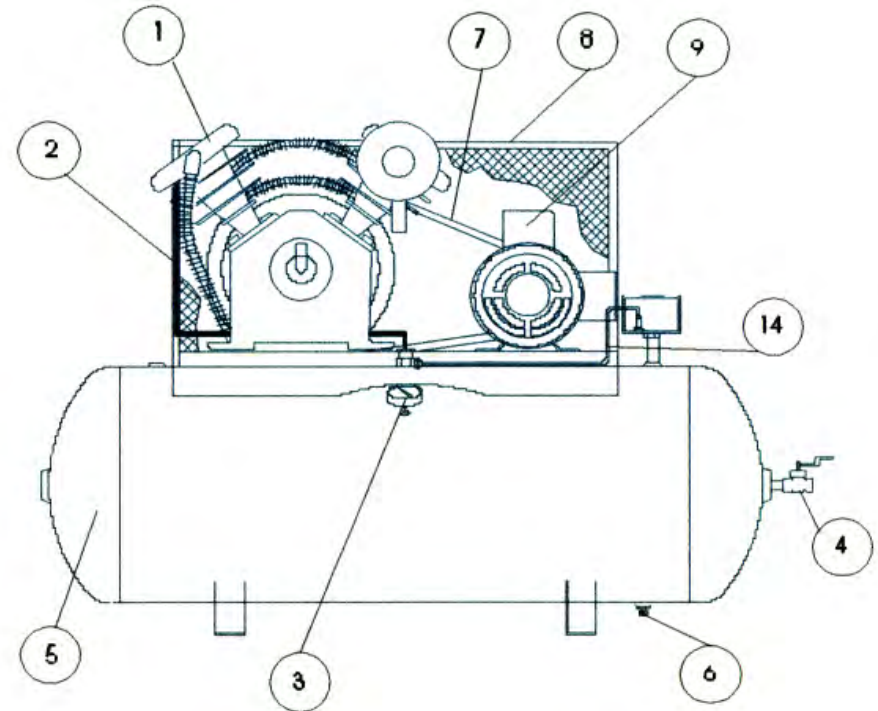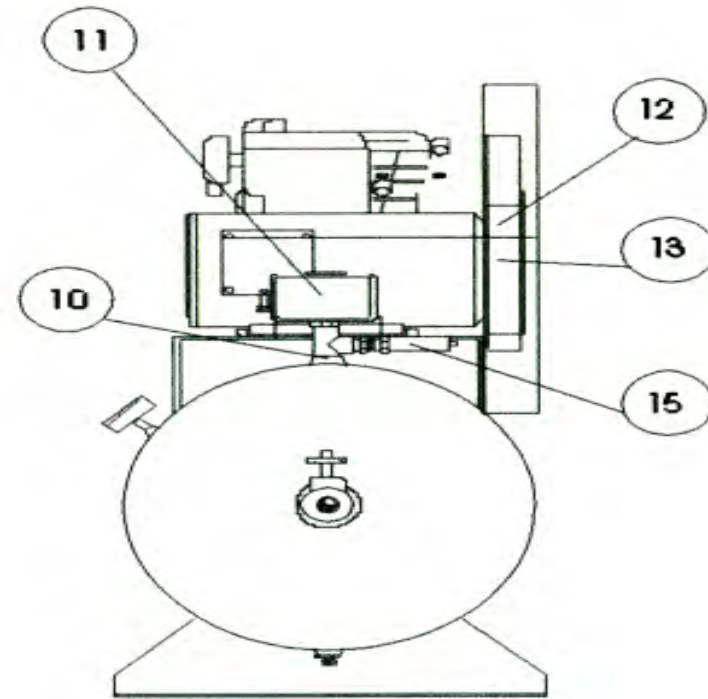  



103120H2-CS460



Call 1-800-551-2406 for the Customer Service Department.

Eagle Air Compressor part breakdown sheet - 153120H2-MS230

Item	Description	153120H2-MS230
1	Compressor w/ Flywheel	HPT15
2	Discharge Tube	TU-16-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	DC1/4
7	V-Belt	B76 (2)
8	Belt Guard	BG15
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM15.0-18-30
	- 3 Phase, 575Volt	EM15.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	3BEHD-170
12	Pulley - Motor	4B6.4PD
13	Hub or Bushing	SD15/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	FFGC420
	Eagle Compressor Oil	EAOIL10

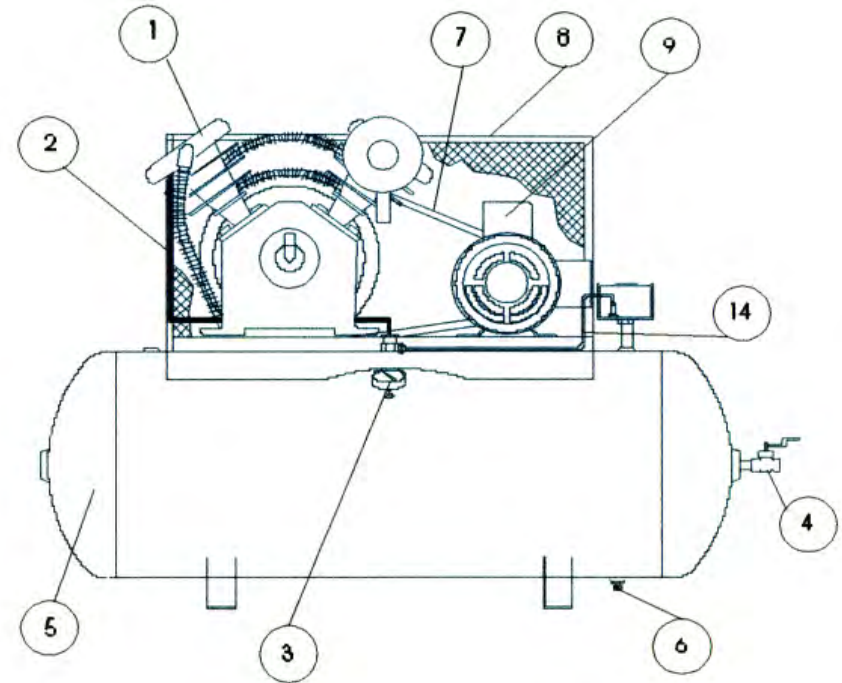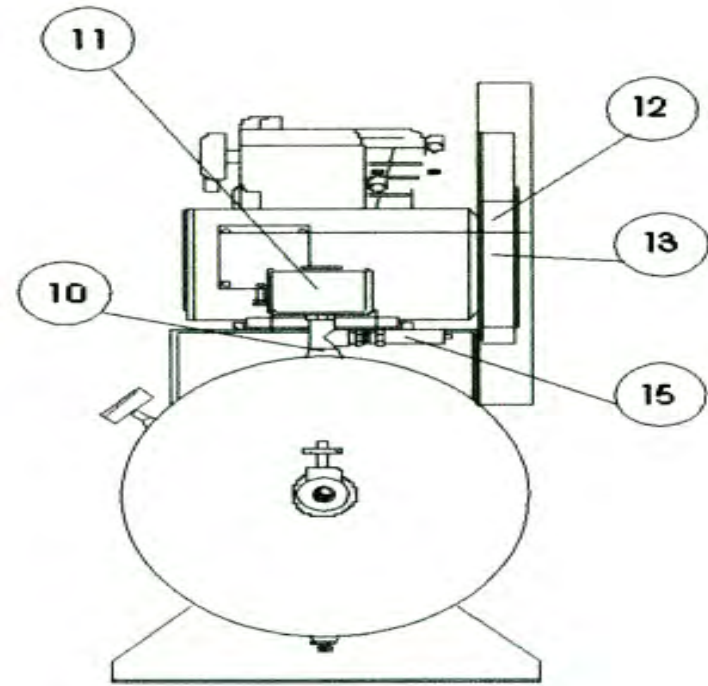  



153120H2-MS230



Call 1-800-551-2406 for the Customer Service Department.

Eagle Air Compressor part breakdown sheet - 153120H2-MS208

Item	Description	153120H2-MS208
1	Compressor w/ Flywheel	HPT15
2	Discharge Tube	TU-16-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	DC1/4
7	V-Belt	B76 (2)
8	Belt Guard	BG15
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM15.0-18-30
	- 3 Phase, 575Volt	EM15.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	3BEHD-170
12	Pulley - Motor	4B6.4PD
13	Hub or Bushing	SD15/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	SS99092
	Eagle Compressor Oil	EAOIL10

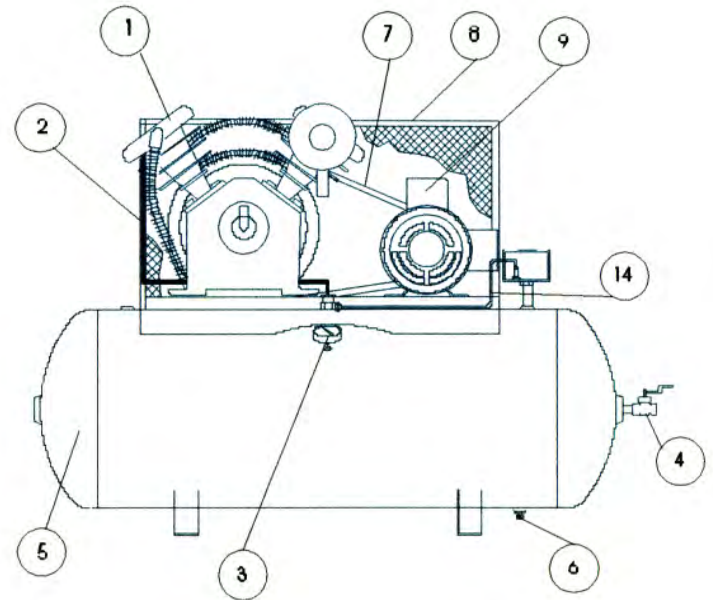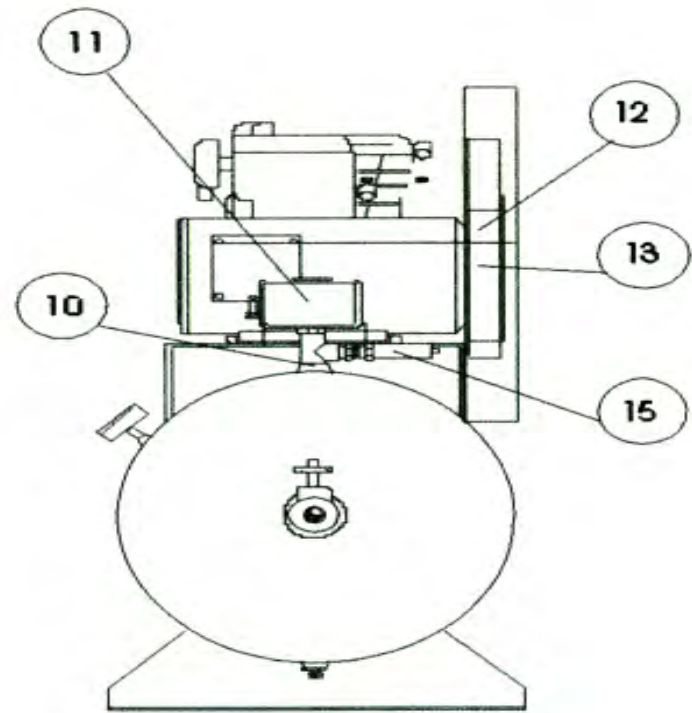  



153120H2-MS208



Call 1-800-551-2406 for the Customer Service Department.

Eagle Air Compressor part breakdown sheet - 103120H2-MS230

Item	Description	103120H2-MS230
1	Compressor w/ Flywheel	HPT10A
2	Discharge Tube	TU-11.5-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	DC1/4
7	V-Belt	B89 (2)
8	Belt Guard	BG10
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM10.0-18-30
	- 3 Phase, 575Volt	EM10.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	3BEHD-170
12	Pulley - Motor	2B9.4PD
13	Hub or Bushing	SK13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	QFGB320
	Eagle Compressor Oil	EAOIL10

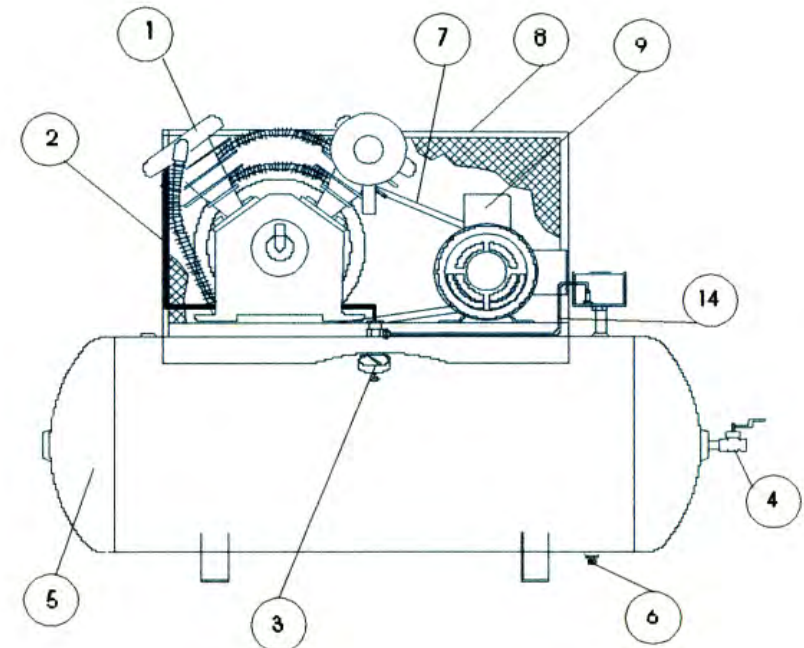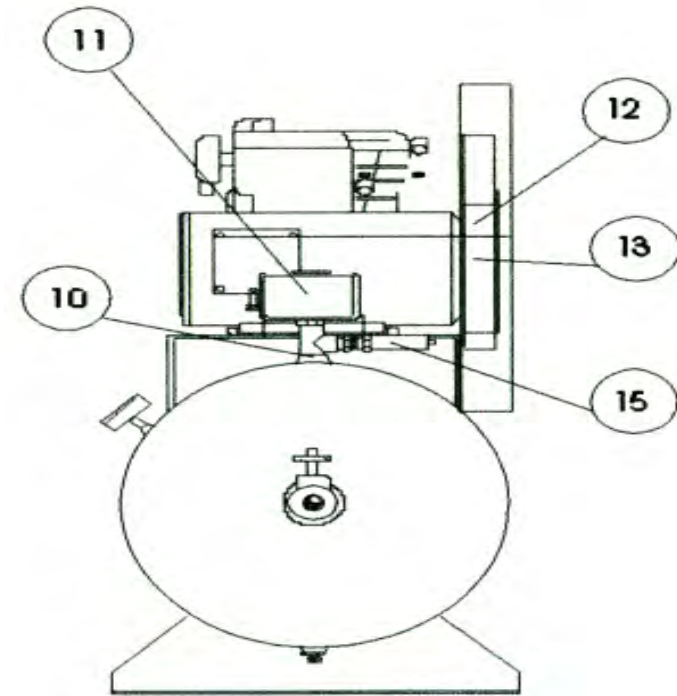  


103120H2-MS230




Call 1-800-551-2406 for the Customer Service Department.

Eagle Air Compressor part breakdown sheet - 103120H2-MS208		
Item	Description	103120H2-MS208
1	Compressor w/ Flywheel	HPT10A
2	Discharge Tube	TU-11.5-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	DC1/4
7	V-Belt	B89 (2)
8	Belt Guard	BG10
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM10.0-18-30
	- 3 Phase, 575Volt	EM10.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	3BEHD-170
12	Pulley - Motor	2B9.4PD
13	Hub or Bushing	SK13/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
16	Magnetic Starter	FFDC420
	Eagle Compressor Oil	EAOIL10

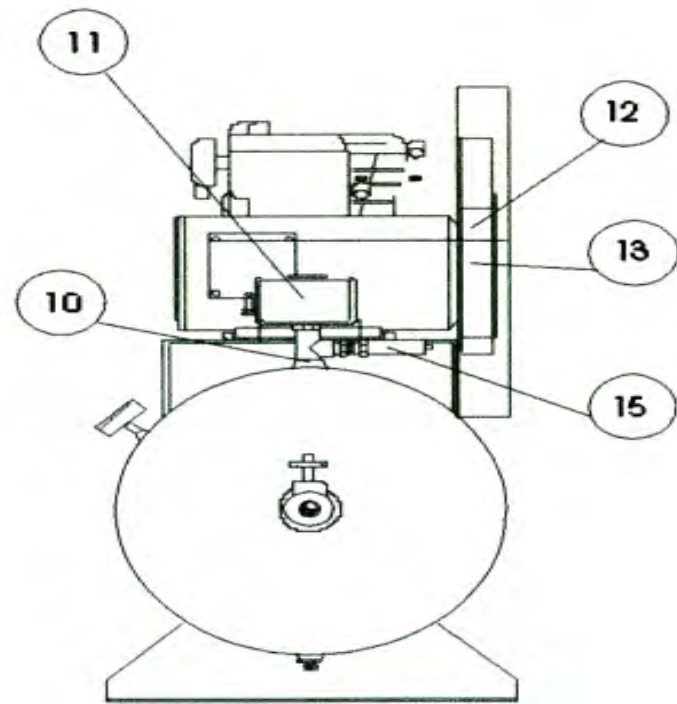 



103120H2-MS208

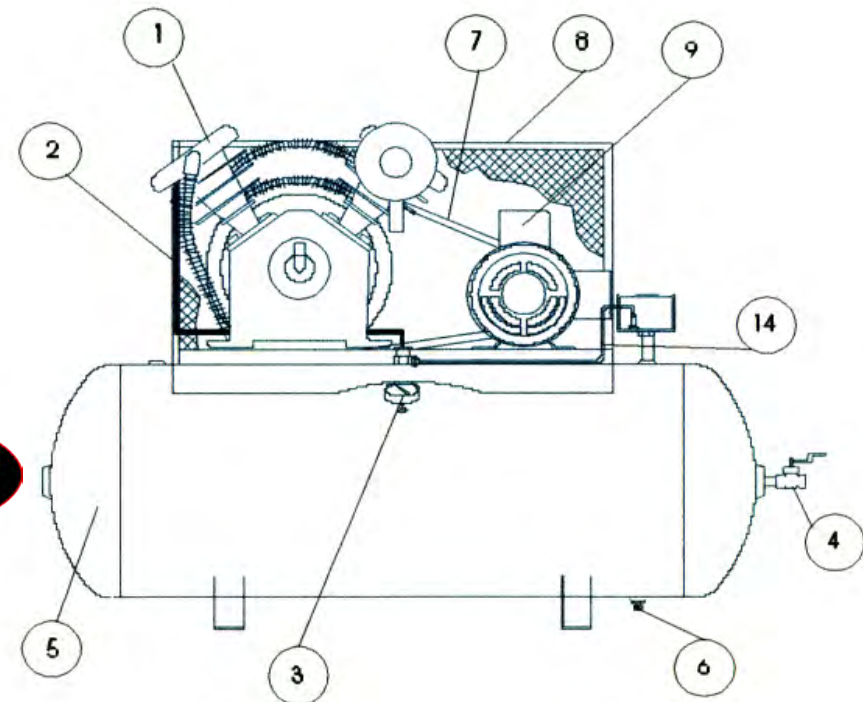 

Call 1-800-551-2406 for the Customer Service Department.

Eagle Air Compressor part breakdown sheet - 153120H2-CS460

Item	Description	153120H2-CS460
1	Compressor w/ Flywheel	HPT15
2	Discharge Tube	TU-16-BR
	Flare Fitting/Elbow	F041S-16SP & 48-16H
3	Pressure Gauge (Tank)	PG200-2.5R
4	Outlet Valve	VA1
5	Air Receiver	120HE24X68-B
6	Drain Cock	DC1/4
7	V-Belt	B76 (2)
8	Belt Guard	BG15
9	Motor - 1 Phase, 208/230Volt	N/A
	- 3 Phase, 208/230-460V	EM15.0-18-30
	- 3 Phase, 575Volt	EM15.0-18-50
10	Check Valve	P1010S-T
11	Pressure Switch	CS-20/24A
12	Pulley - Motor	4B6.4PD
13	Hub or Bushing	SD15/8
14	Unloader Tube w/ Fittings	TU-1/4-CU & 68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10

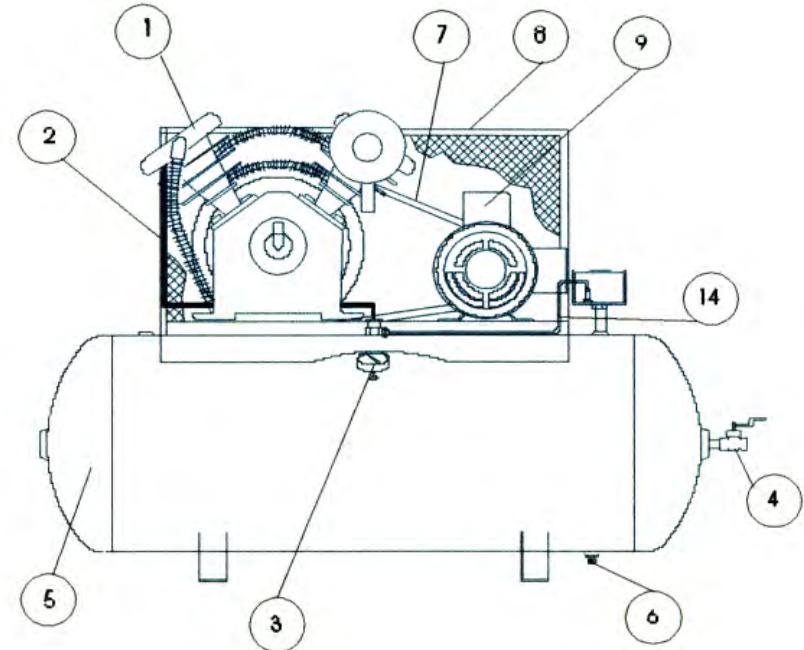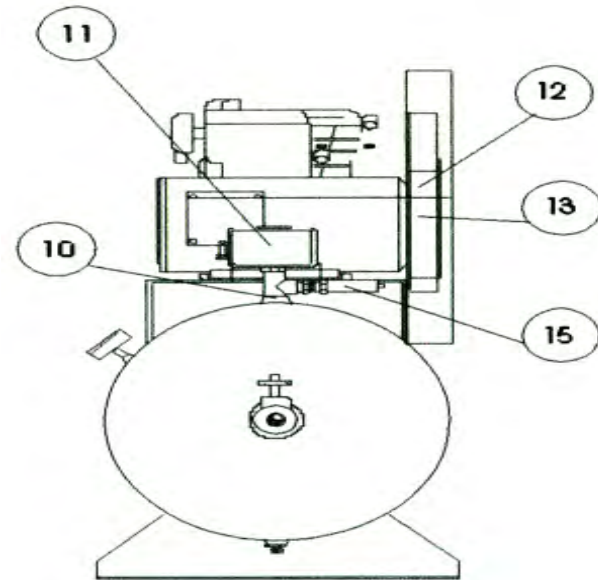  

153120H2-CS460



Call 1-800-551-2406 for the Customer Service Department.