




| ITEM # | DESCRIPTION                   | QTY. | PART #    |
|--------|-------------------------------|------|-----------|
| 1      | Bolt for cylinder head        | 8    | TB-30-01  |
| 2      | Washer for head bolt          | 8    | TB-30-02  |
| 3      | Cylinder head                 | 2    | TB-30-03  |
| 4      | Air filter                    | 2    | TB-30-04  |
| 5      | Washer for air filter         | 4    | TB-30-05  |
| 6      | Bolt for air filter           | 4    | TB-30-06  |
| 7      | Head gasket                   | 2    | TB-30-07  |
| 8      | Valve seat                    | 4    | TB-30-08  |
| 9      | Aluminum gasket               | 2    | TB-30-09  |
| 10     | Valve plate reed              | 4    | TB-30-10  |
| 11     | Valve seat / cylinder gasket  | 2    | TB-30-11  |
| 12     | Cylinder                      | 2    | TB-30-12  |
| 13     | Cylinder to crankcase nut     | 8    | TB-30-13  |
| 14     | Cylinder-crank washer         | 8    | TB-30-14  |
| 15     | Cylinder-crank bolt           | 8    | TB-30-15  |
| 16     | Cylinder-crank gasket         | 2    | TB-30-16  |
| 17     | Compression rings             | 4    | TB-30-17  |
| 18     | Ring kit                      | 2    | TB-30-18  |
| 19     | Oil control ring              | 2    | TB-30-19  |
| 20     | Piston                        | 2    | TB-30-20  |
| 21     | Piston pin                    | 2    | TB-30-21  |
| 22     | Piston pin clip               | 2    | TB-30-22  |
| 23     | Connecting rod                | 2    | TB-30-23  |
| 24     | Oil splasher                  | 2    | TB-30-24  |
| 25     | Oil splasher bolt             | 2    | TB-30-25  |
| 26     | 3-way connector pipe          | 2    | TB-30-26  |
| 27     | Exhaust pipe nut              | 1    | TB-30-27  |
| 28     | Elbow connector pipe          | 1    | TB-30-28  |
| 29     | Intercooler tube              | 1    | TB-30-29  |
| 30     | Bearing cover bolt            | 1    | TB-30-30  |
| 31     | Bearing cover bolt washer     | 4    | TB-30-31  |
| 32     | Front bearing cover           | 4    | TB-30-32  |
| 33     | Oil sight glass gasket        | 1    | TB-30-33  |
| 34     | Oil sight glass               | 1    | TB-30-34  |
| 35     | Oil drain plug                | 1    | TB-30-35  |
| 36     | Front bearing cover gasket    | 1    | TB-30-36  |
| 37     | Oil fill plug washer          | 1    | TB-30-37  |
| 38     | Oil fill plug                 | 1    | TB-30-38  |
| 39     | Crankcase                     | 1    | TB-30-39  |
| 40     | Front bearing                 | 1    | TB-30-40  |
| 41     | Crankshaft                    | 1    | TB-30-41  |
| 42     | Rear bearing                  | 1    | TB-30-42  |
| 43     | Crankshaft oil seal           | 1    | TB-30-43  |
| 44     | Rear bearing cover gasket     | 1    | TB-30-44  |
| 45     | Rear bearing cover            | 1    | TB-30-45  |
| 46     | Crankcase breather and O ring | 1    | TB-30-46  |
| 47     | Rear cover bolt washer        | 4    | TB-30-47  |
| 48     | Rear cover bolt               | 4    | TB-30-48  |
| 49     | Fly wheel                     | 1    | TB-30-49  |
| 50     | Fly wheel cover washer        | 1    | TB-30-50  |
| 51     | Fly wheel lock washer         | 1    | TB-30-51  |
| 52     | Fly wheel bolt                | 1    | TB-30-52  |
| 53     | Air filter element            | 2    | TB-10-43E |
| A      | Valve repair kit              | 1    | TB-30-53  |

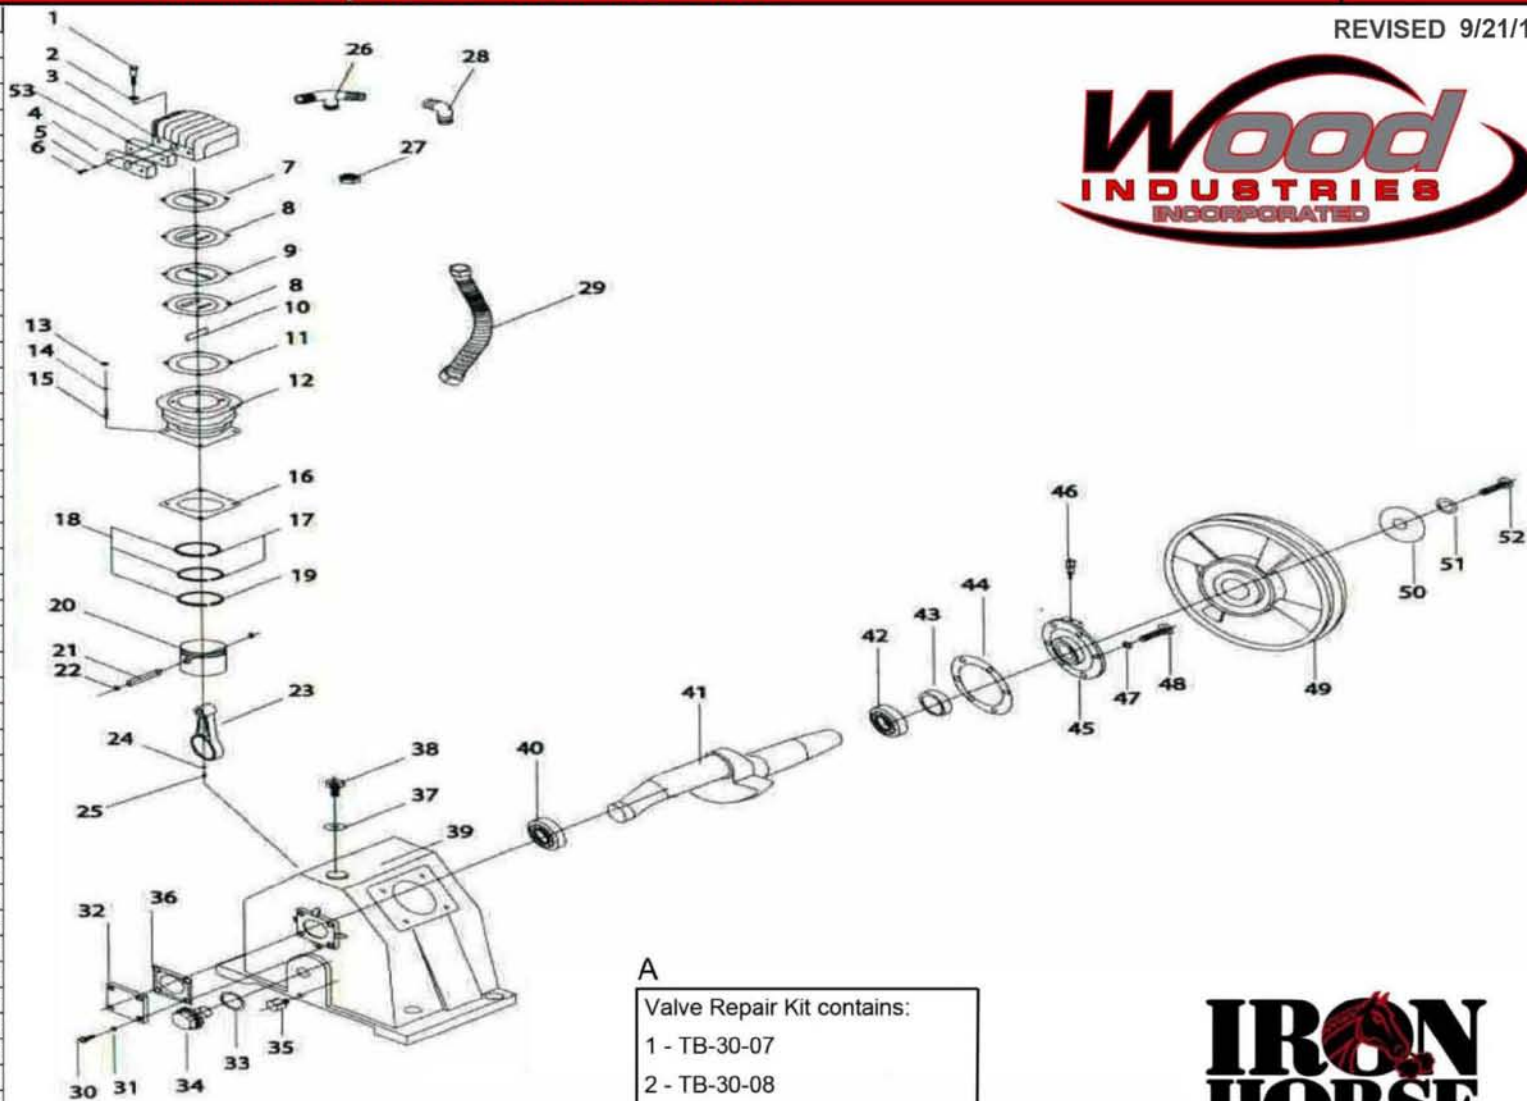

A  
 Valve Repair Kit contains:  
 1 - TB-30-07  
 2 - TB-30-08  
 1 - TB-30-09  
 2 - TB-30-10  
 1 - TB-30-11



For customer service call:  
**1-800-551-2406**

**CC2065**