


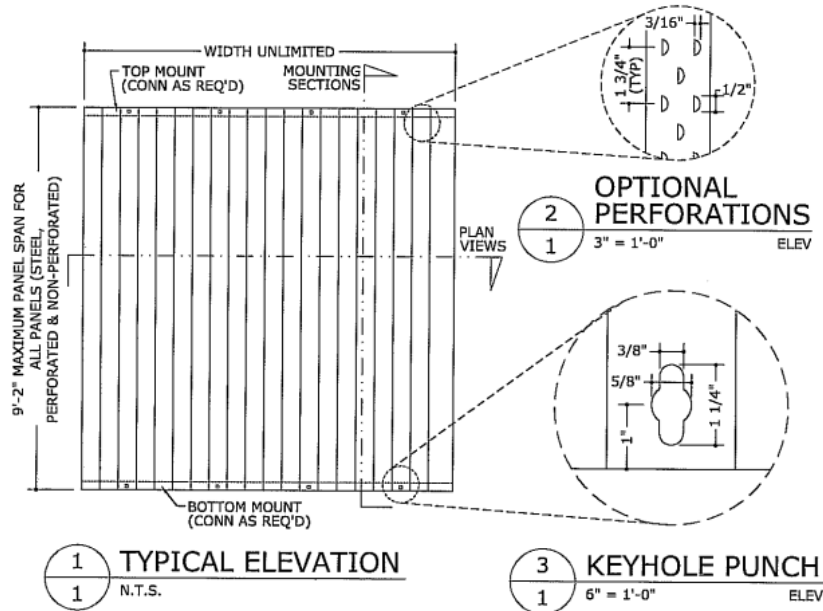

# Storm Protection - Installation Instructions



**Figure 1: Typical Installed Panels**

## Instructions MPM

### Male Panel Mate (MPM)

- 1) Locate studs around openings.
- 2) Locate marked panels
- 3) Locate panel layout table
- 4) Locate hardware (wingnuts)
- 5) Place panels for each opening near each opening according to panel layout table
- 6) Remove male panel mate caps.  
-Store these caps for later
- 7) Place panel over studs
- 8) Place wingnut on studs (hand tight)  
Note: wingnut needed only every 12"  
-in most cases this means:  
"skipping a hole" on panels
- 9) Do this for each opening/all panels
- 10) To remove panels:  
-execute these directions in reverse

## Instructions FT

### FTrack (FT)

- 1) Locate studs around openings.
- 2) Locate marked panels
- 3) Locate panel layout table
- 4) Locate hardware (wingnuts and bolts)
- 5) Place panels for each opening near each opening according to panel layout table
- 6) Insert bolts into each track.  
-align these bolts with panel keyholes
- 7) Place panel over bolts
- 8) Place wingnut on bolts (hand tight)  
Note: wingnut needed only every 12"  
-in most cases this means:  
"skipping a hole" on panels
- 9) Do this for each opening/all panels
- 10) To remove panels:  
-execute these directions in reverse